
## Scorpion CL - Connection Diagram

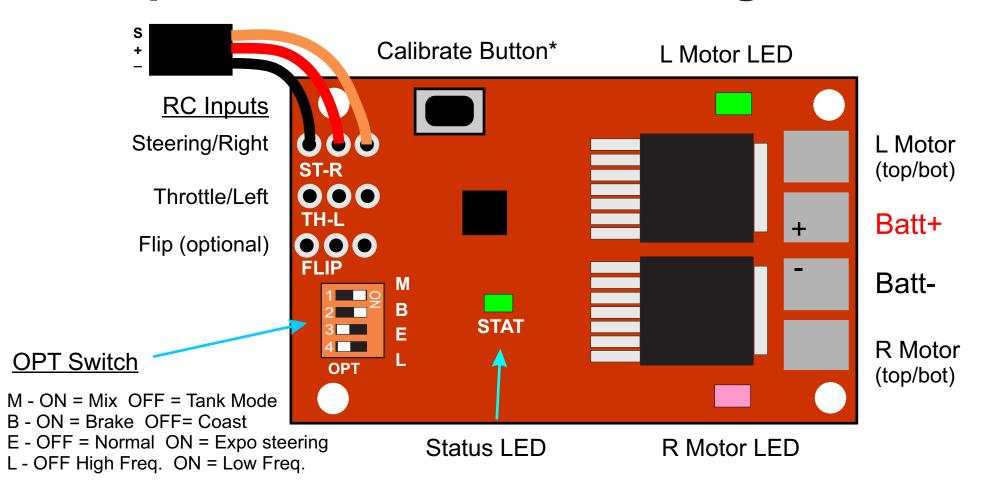



## \*Calibration Sequence

- 1. Attach RC wires to RX. Center sticks and trims
- 2. Apply power to TX and Scorpion. Look for solid Status LED
- 3. Press and hold CAL button until Status LED goes out
- 4. Release CAL button and move sticks to maximum limits
- 5. Press and release CAL button to store settings
- 6. Test and repeat procedure if needed